


## Crack Filling

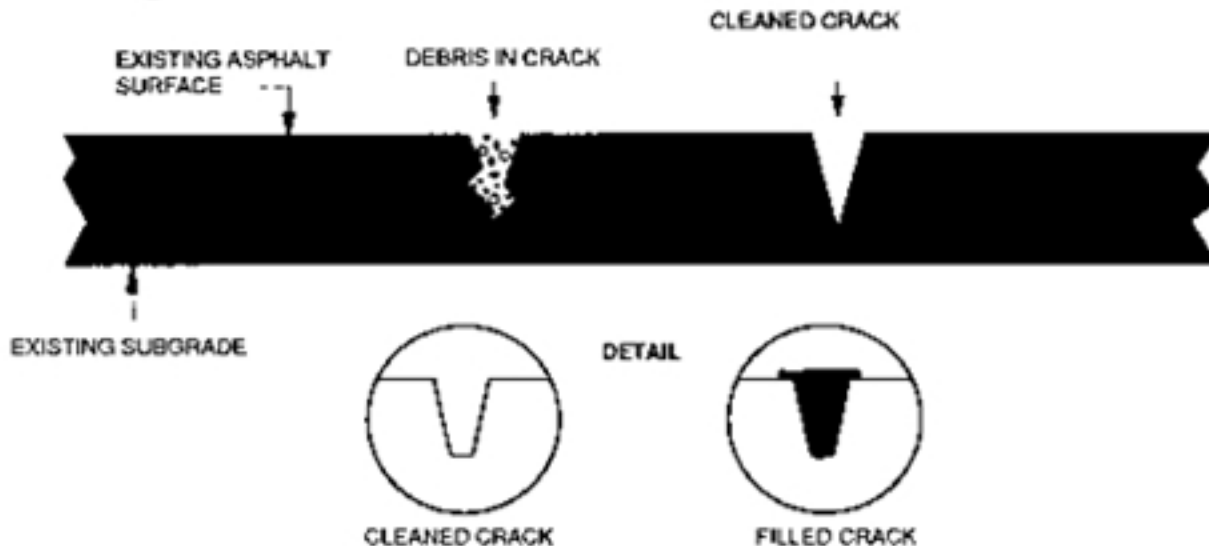

1. Identify the isolated cracks greater than 3/4" wide for repair.
2. Clean the isolated cracks by power blower and/or high-pressure heat lance. Dispose of all debris offsite.
3. Install hot pour rubberized crack filler in areas of repair to finished grade of existing surface one time only. Filler to be applied to dry surfaces. Filler may not be flush with asphalt surface to allow for expansion and contraction.

**NOTE:** Areas of severe separation and depression should be addressed as Enhanced Crack Filling.

