



# Enhanced Crack Filling

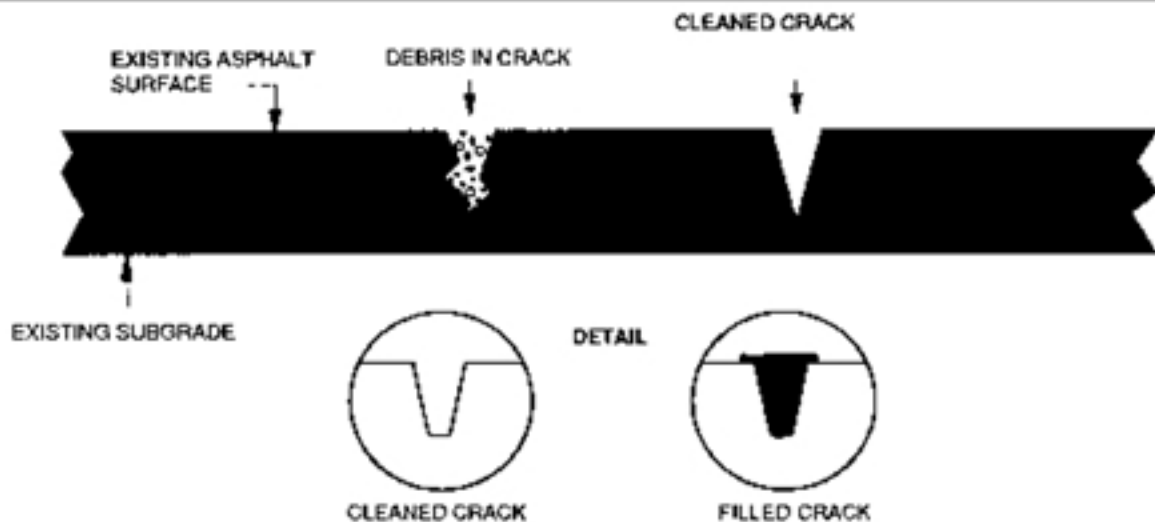

1. Identify the isolated cracks greater than 3/4" wide for repair.
2. Prepare all areas to be filled or repaired by routing or cutting to a minimum depth of 1".
3. Clean the isolated cracks by power blower and/or high-pressure heat lance. Dispose of all debris offsite.
4. At cracks less than 1-1/4" wide, fill with hot pour rubberized crack filler in areas of repair to finished grade of existing surface one time only. Filler to be applied to dry surfaces. Filler may not be flush with asphalt surface to allow for expansion and contraction.
5. At areas of severe separation, apply hot mix fine aggregate asphalt.

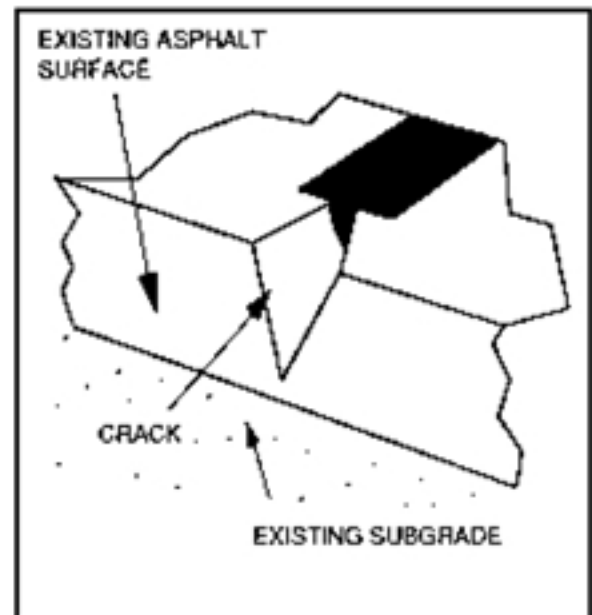

\*NOTE: At areas of severe separation and depression, crack filler may penetrate and shrink below the finished asphalt surface. Alligatored areas should be addressed as Full-Depth Asphalt Restoration.