


## Full - Depth Base Asphalt Restoration

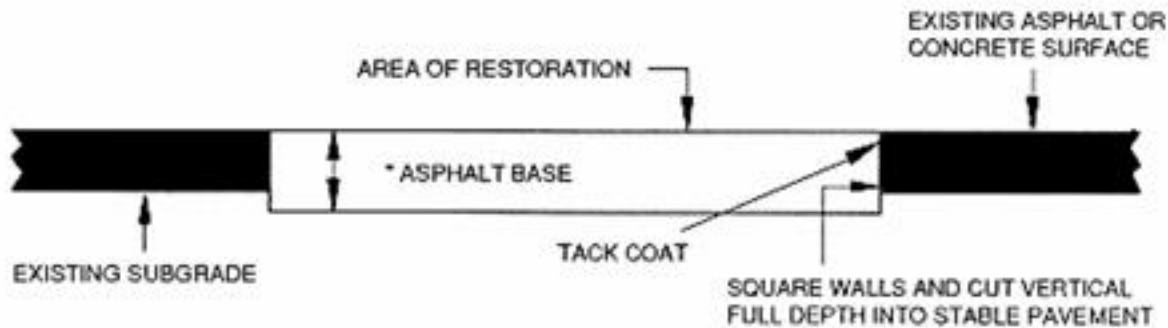

1. Layout and mark all areas of repair.
  2. Excavate areas to be repaired to a 6" depth. Dispose of all debris offsite.
  3. Square surface of repair and cut walls of repair to produce vertical edges.
  4. Roll existing subgrade materials to achieve maximum density.
  5. Mechanically apply liquid asphalt tack coat to all vertical edges of repair.
  6. Install 6" of hot mix asphalt base course material.
  7. Roll asphalt base course to achieve a true and firm finish matching existing grade.
- NOTE:** Asphalt General is not responsible for ponding water or poor drainage in areas where grade is less than 2%.

